



Assembly Instructions


Aurora Bed

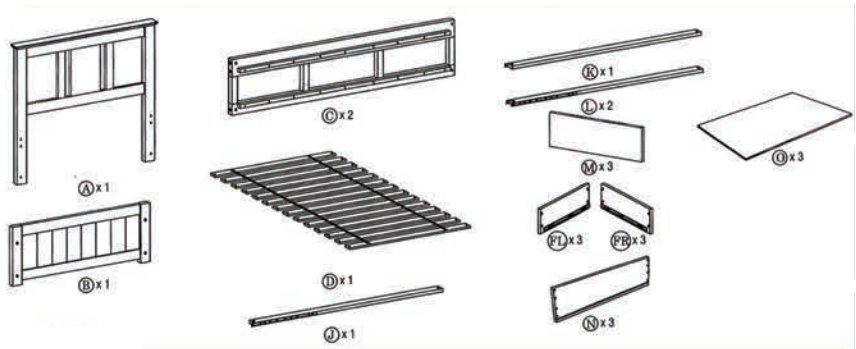


1.  x 8 M6 x 50mm	2.  x 8 JCBC M6 x 60mm	3.  x 8 M6 x 13mm
4.  x 4 M8 x 30mm	5.  x 52 M4 x 28mm	6.  x 1 M4 ALLEN KEY WITH BALL
7.  x 8 WASHER M7 x 10mm		

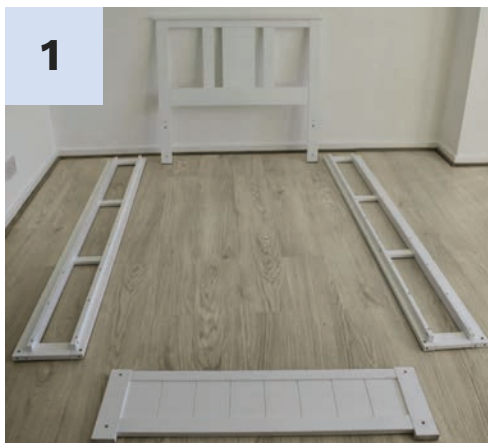

Locate pieces **A, B & C** and lay them out as shown in the image

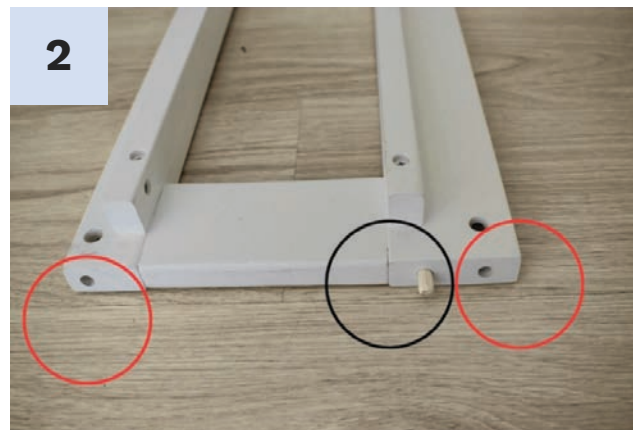

Place the wooden dowel [NO.4] inside the middle hole on the edges of both side panel's, and the M6 nut [NO.3] in the two remaining holes.

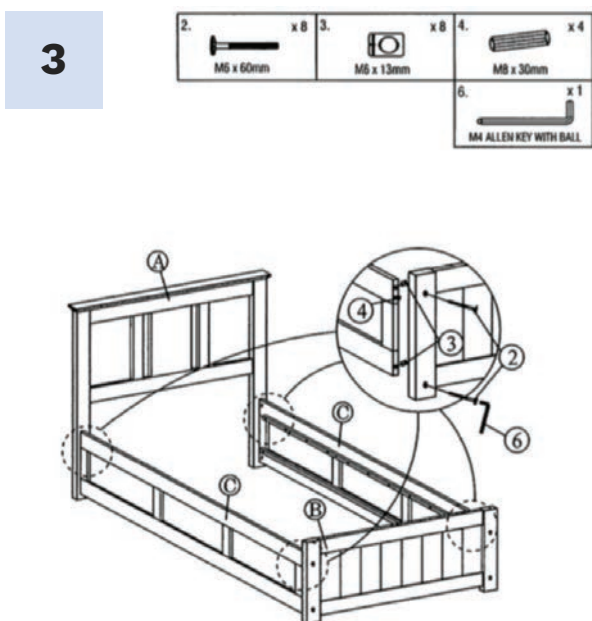


Using the **M6 screws** and Allen key screw in all 8 screws to form the frame of the bed including the headboard.

Assembly Instructions

Aurora Bed

4

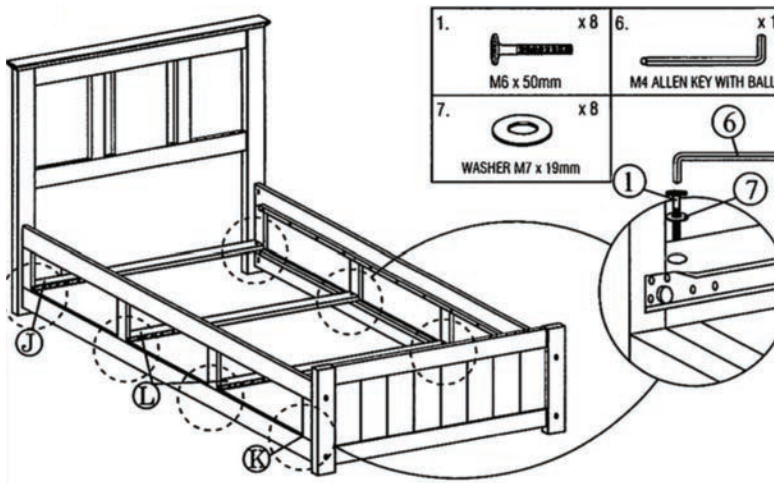


Using pieces **J, K & L** attach all four wooden slats to the bed base using the M6 screws [NO.1] and M7 washers [NO.7] using the Allen key. Placing both L slats in the middle, J towards the head of the bed and slat K towards the tail.




Now you are ready to form the drawers



5

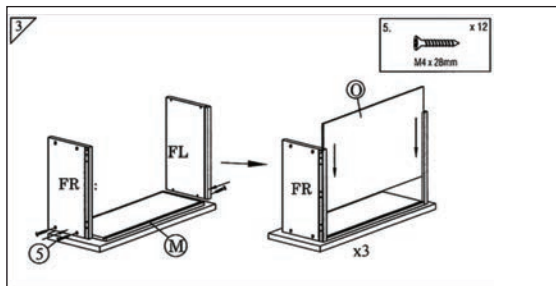

To join the drawers together you will require piece M to be placed on a flat surface whilst you screw in two M4 screws on each side to secure piece FR & FL together. Simply slot in piece O

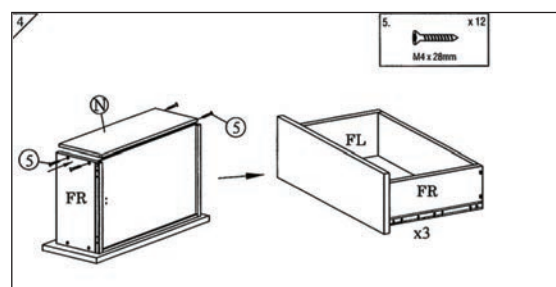



Screw in piece N to the back end of the drawer using two M4 screws [NO.5] on each side

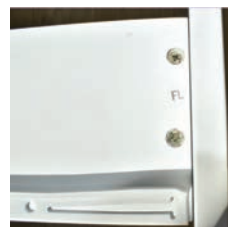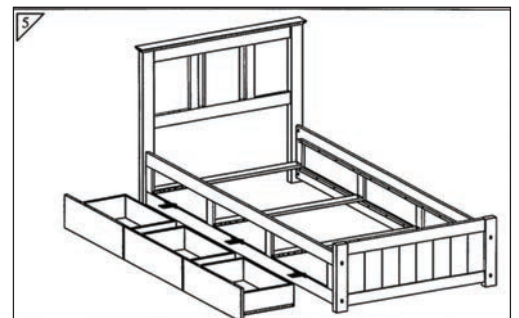

Assembly Instructions

Aurora Bed

6

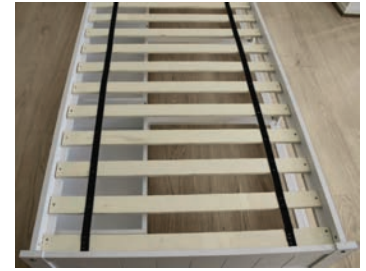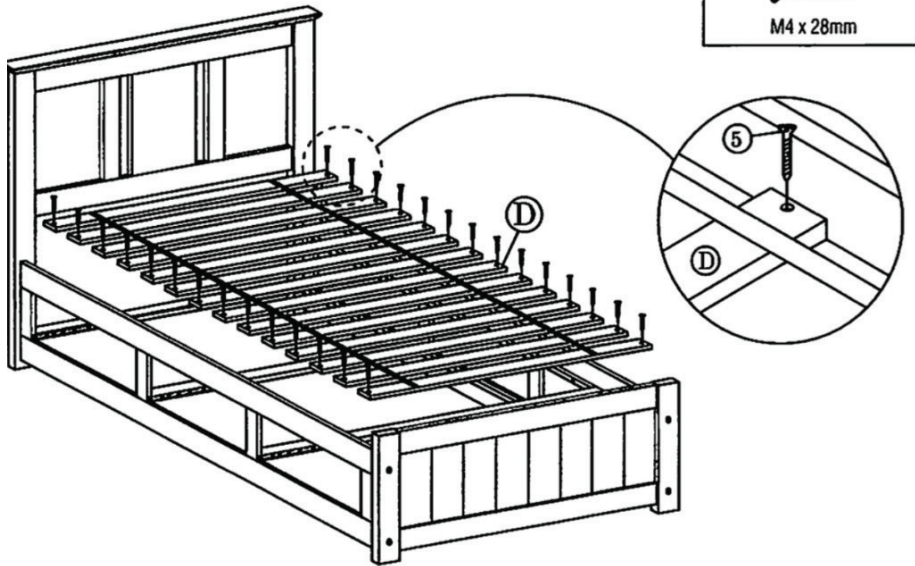

Place the wooden slats on top of the base of the bed, lining them so they are sitting evenly across the base.



Use the M4 screws [NO.5] to screw in along the pre drilled holes.



Your Aurora Bed is ready.