

Assembly Instructions for Ottoman Gas Lift

1

Step 1

Locate the bases within the desired room, and remove all the packaging.

Step 2

Place the base(s) on their side so that you can see the underside of the bed (fig.1)

Step 3

If feet need to be fitted to the bases, do this now (the feet are inside the base)

Step 4

Align the first base in it's desired position in the room

Step 5

Repeat with the second base (ensure the round corners are on the outside)

NOTE: Small single / Single bed comes with 1 base

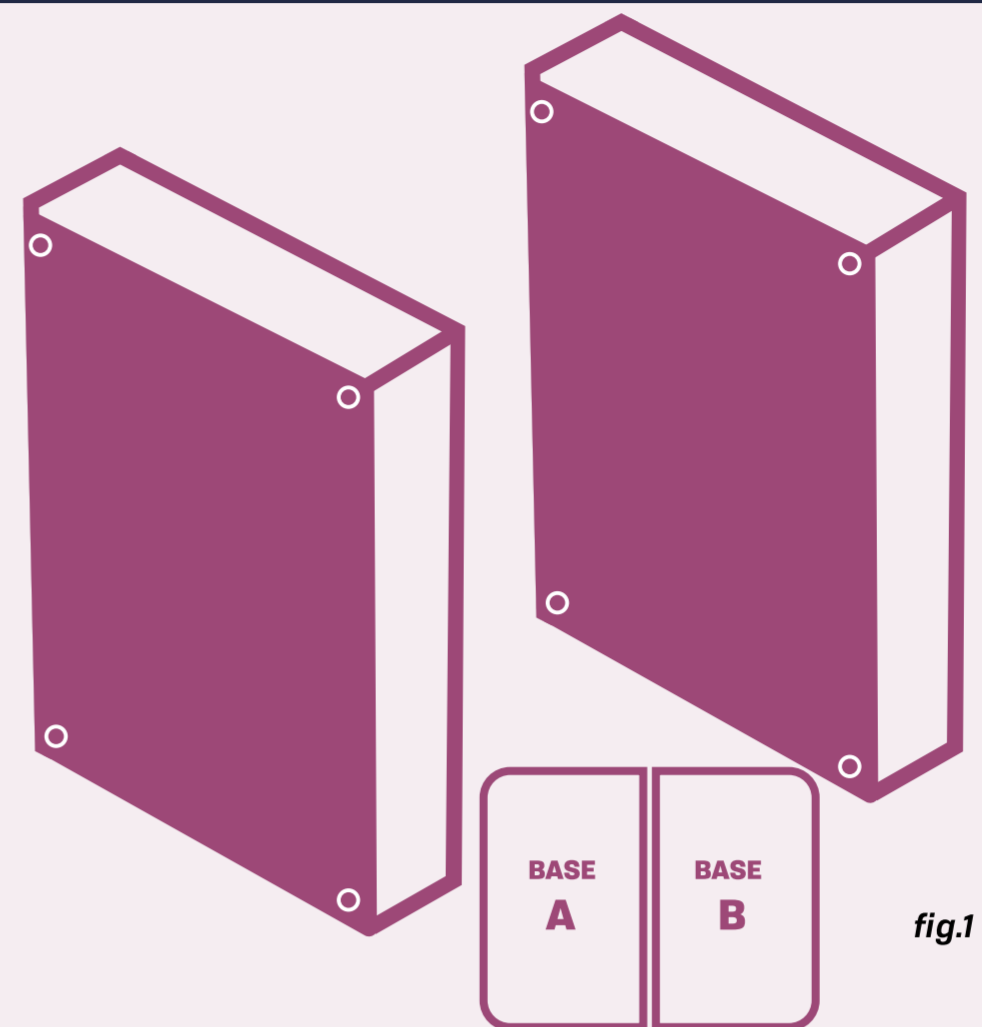


fig.1

2

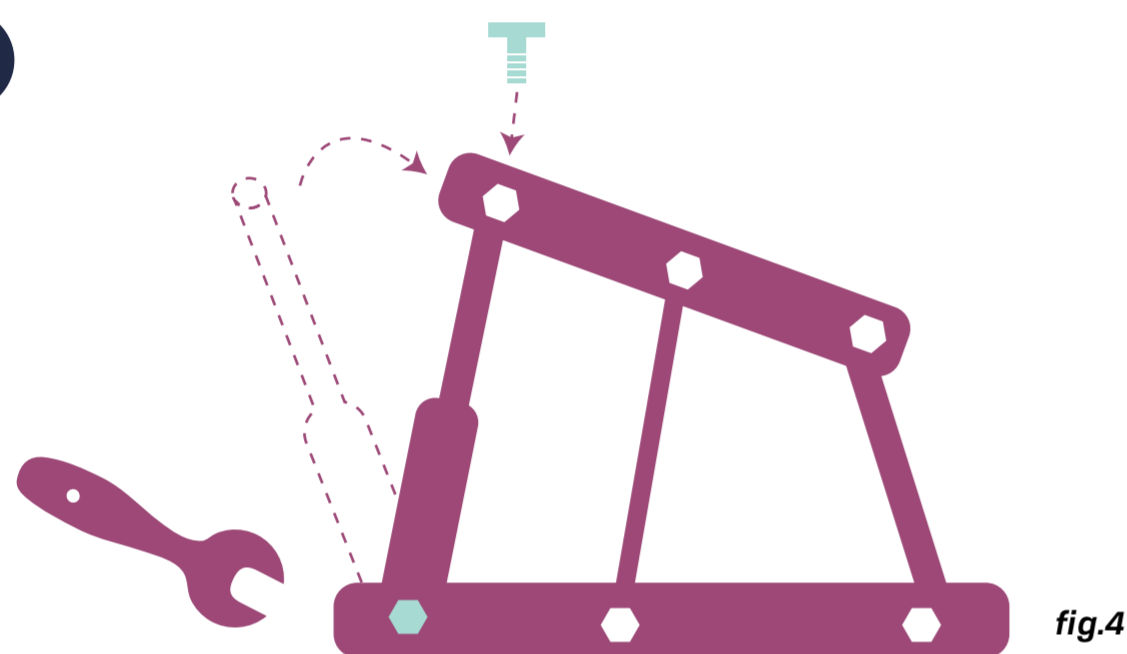


fig.4

Step 6

Once the ottomans are open, place the bolts on the pistons, as shown in diagram (fig.4)

Step 7

Please **tighten** the bolts but don't over tighten to set the required opening resistance.

3

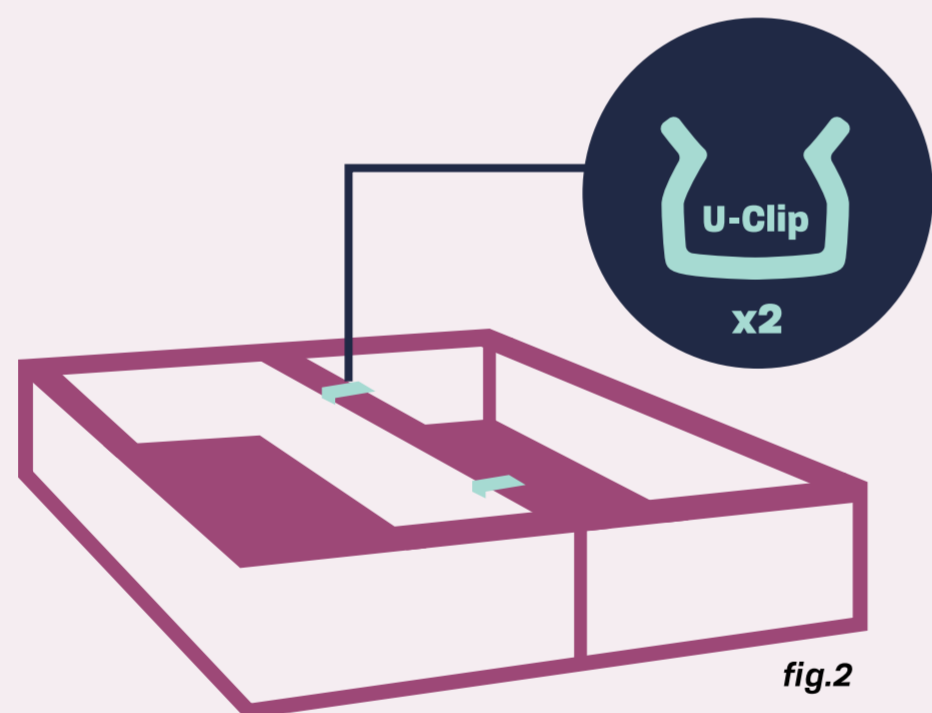


fig.2

Step 8

Place the "U-clips" (fig.2) (see diagram) and locate the clips on to the bases of the units in illustrated location, then place the units the right way up on their feet.

Step 9

With help, position the units in the desired location and in the desired orientation in terms of the Ottoman opening direction.

4



Fig.3

Step 8

Locate M8 Bolt & Screw it to the side of the lift (fig.3)
End opening see (fig.3a)

Step 9


Choose which side you want the headboard and place the Screw. (fig.3)
End opening see (fig.3a)



(fig.3a)

Step 9a

For side opening Headboard spacers needs to be in between headboard & bed base (fig.3)

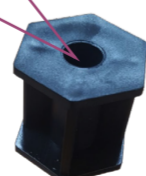

For more info visit: nextdivan.co.uk


next divan®

 BED CENTRE